


## **EZ lift bed Systems 960016 and 960031**

- 1** – locate wall stud or other support structure
- 2** -fasten wall bracket to the support structure using # 8 - 1 1/2" screws
- 3** – measure for your mattress width and install the other wall bracket
- 4** – slide finished bed platform into position on the support brackets and fasten using #8 –3/4 self tapping screws. Make sure to fasten both sides of the platform
- 5** – 18 inches from the top of the mattress install the leg brackets
- 6** – install the leg spacer on to leg to connect them.
- 7** –bed should be ready to fold



Install 1.5" #8 screws into a stud or other support structure

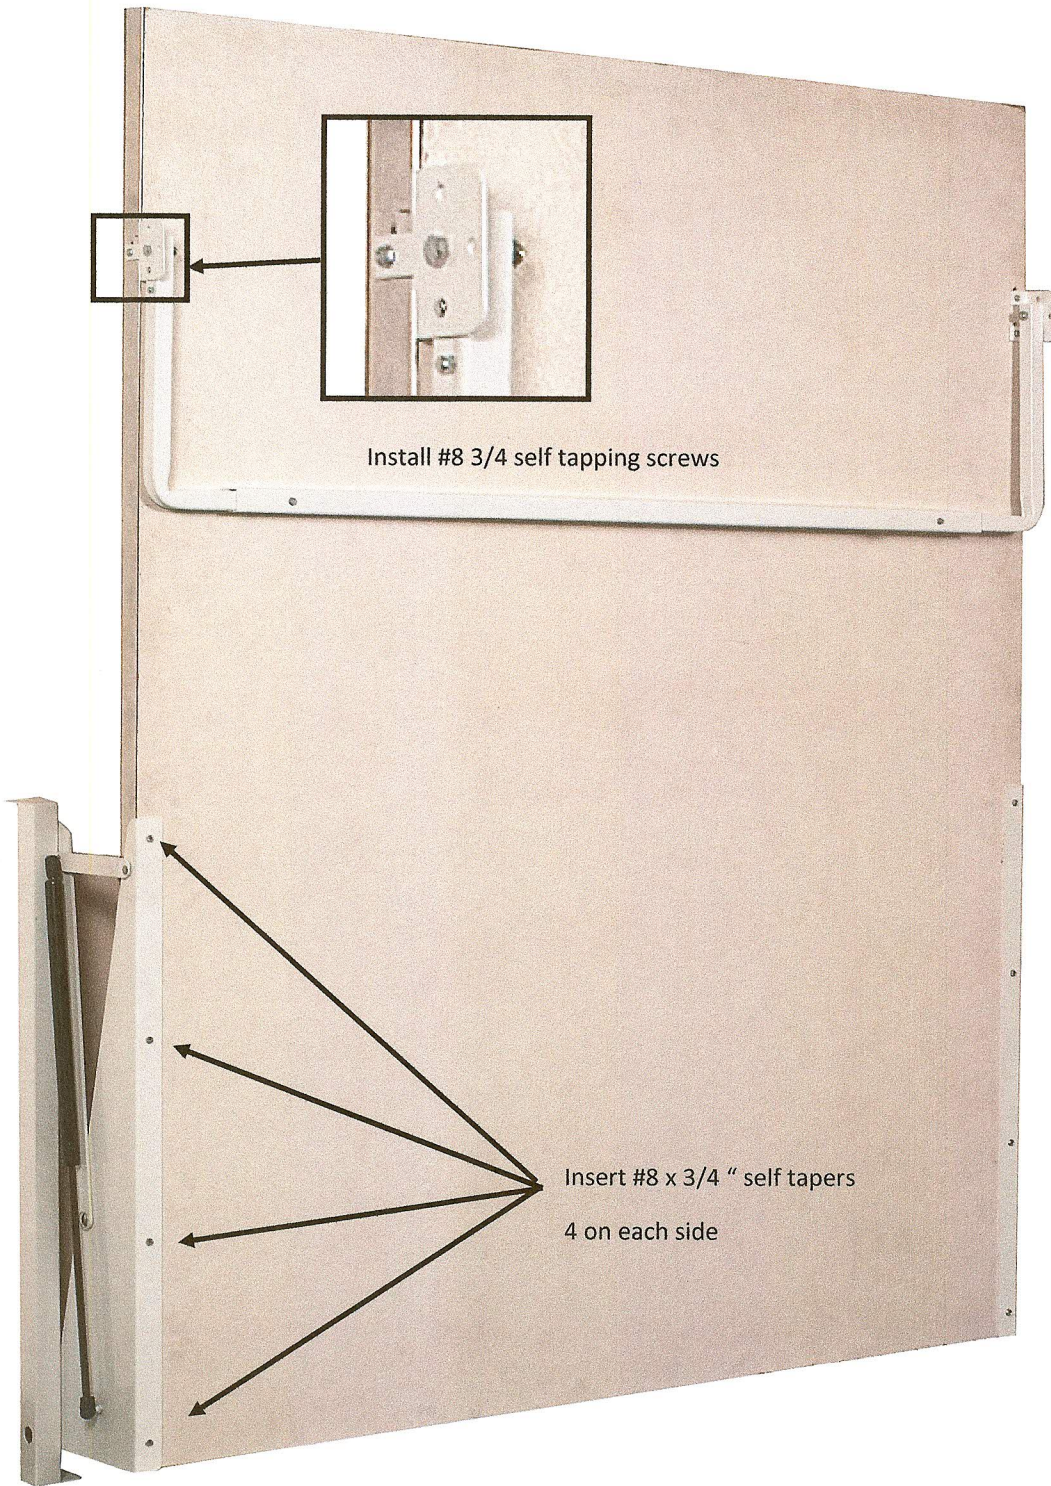

Install #8 3/4 self tapping screws

Insert #8 x 3/4 " self tapers  
4 on each side